

DSSE

PRODUCT MANUAL



MIA HYDRAULIC BEAUTY BED BB04

Streamlined Comfort with Manual Versatility

Designed for professionals across beauty, wellness, and tattoo industries, the Mia Hydraulic offers a perfect balance of functionality, comfort, and stability. This 3-section treatment couch features a heavy-duty hydraulic pump for smooth height adjustment, while the backrest and leg sections are manually operated for easy positioning.

Introduction

This manual is intended solely as a reference for the operation of this specific model. DSSE assumes no responsibility or liability for any consequences resulting from its use for other purposes. All information contained in this manual is protected by copyright and may not be copied, reproduced, or translated, in whole or in part, without the prior written consent of our company.

Safety Instructions

- Always ensure the bed is stable and positioned on a flat, level surface before use.
- Do not stand, jump, or apply excessive force to any part of the bed.
- Keep children away from the equipment and never leave them unattended around it.
- When leaving the bed unattended, always return the backrest and leg sections to their safest positions.
- Avoid placing the bed in damp or wet areas to prevent damage to the frame, upholstery, and mechanical parts.
- Avoid using the equipment in environments where painting, coating, or oxygen provision is taking place.
- Unless supervised or instructed by qualified personnel, people with physical disabilities, sensory disorders, mental impairments, lack of experience or common sense, and children are not permitted to use the equipment.
- If any part of the bed becomes damaged, loose, or unstable, discontinue use immediately and contact your distributor or a qualified technician for inspection or repair.
- Ensure there are no objects within the equipment's movement range during operation.
- All maintenance must be performed by trained professionals only.

Precautions

- This equipment should only be operated by trained or experienced personnel familiar with its structure and use.
- Read this manual carefully before installation, operation, and adjustment. Keep it for future reference.
- Do not apply weight unevenly or use the bed for single-side or single-point loading.
- Regularly check and tighten all bolts, screws, and nuts to prevent loosening caused by movement.
- Do not disassemble parts without proper authorization.
- If faults occur or abnormal noises are heard, stop usage immediately and have the equipment inspected.
- Only resume use after proper troubleshooting.
- Inspect the hydraulic system regularly for leaks, loose bolts, or unusual noises.
- Clean dust and stains using a neutral cleaning agent after each treatment.
- Keep hands, feet, and head clear of moving parts during adjustments.
- Always observe the maximum user weight capacity of the bed.
- Do not sit or apply heavy force on armrests, head or back sections. Refer to the weight limits in this manual.
- Ensure the locking mechanisms are fully engaged before the client lies down.
- Always operate the hydraulic pump with the client positioned centrally on the bed for stability.
- Clients should enter and exit the bed from the middle section only.

**STYLE,
STRENGTH,
SEAMLESS
SUPPORT**

Experience elevated comfort with the Mia Hydraulic Beauty Bed, a beautifully crafted treatment bed trusted by beauty professionals and tattoo artists alike. Ideal for brow and lash services, facials, and more, it delivers exceptional support across a wide range of treatments. Smooth hydraulic height adjustment allows for effortless positioning, ensuring both client comfort and practitioner ease throughout the day. Finished with a sleek base and plush PU upholstery, the Mia combines durability with refined aesthetics, bringing a modern, professional finish to any salon or studio space.

Adjustable Backrest (0° - 55°)

Manually adjustable by hand lever, the backrest allows you to customize the seating angle for optimal comfort and support.

Slot-in Armrests (removable)

The armrests support normal resting weight and can be easily removed for closer access during treatments.

Height Adjustment (66 - 90 cm)

Adjustable height by hydraulic foot pump located at rear of base.

Elegance from the Ground Up

A slimline, sculpted base that lets you get closer to your client for precision and comfort in every treatment.



Wide Insert Pillow

Enjoy extra comfort with a wider pillow insert.

Ergonomic Comfort


Channeled curves contour to the body, offering superior comfort and support throughout treatments.

Adjustable Legrest (0°-70°)

Manual lever adjustment for maximum comfort and support.

Product Specifications

Length:	186cm
Width without/with Arms:	62/82cm
Height Range:	66-90cm
Backrest Adjustment Angle:	Up to 55°
Legrest Adjustment Angle:	Up to 70°
Net Weight:	70 kg
Gross Weight:	82 kg
Max. Load Capacity:	200 kg (seating position)

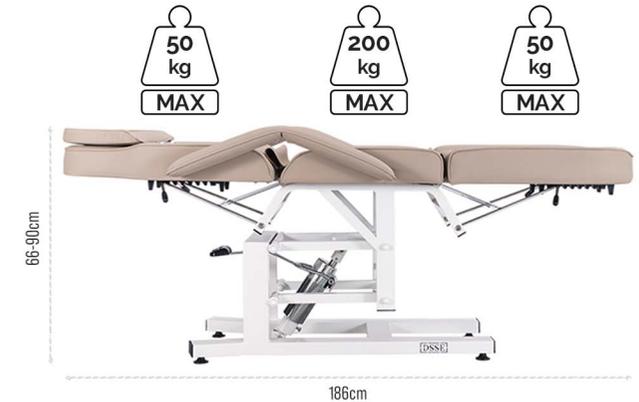


Simple Form, Powerful Function

The Mia Hydraulic Beauty Bed blends elegant design with robust functionality, offering a perfect balance of comfort, durability, and versatility. Built to meet the demands of modern beauty professionals, it features smooth hydraulic height adjustment and a stable, supportive structure—making it ideal for salons, tattoo parlours and treatment rooms focused on both style and performance.

How To Use

Follow these instructions to operate the electric beauty bed safely and effectively.

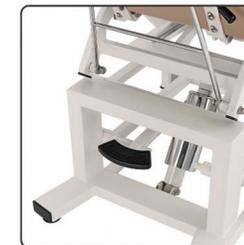

Height Adjustment


Gently step on the foot lever to adjust the height up and down



Leg and Backrest Adjustment


Both sections manually adjusted by hand lever

Installation Preparation: We recommend raising the bed to its maximum height before installation.

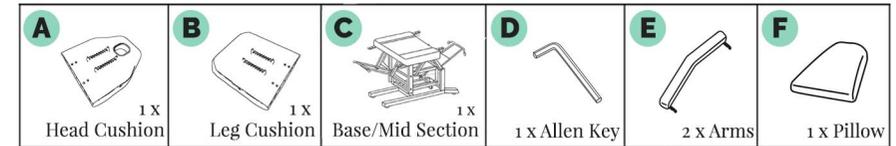

STEP 1

With two people, grasp the middle section (C) by holding the middle cushion. Carefully remove it from the pallet and place the base on the floor.

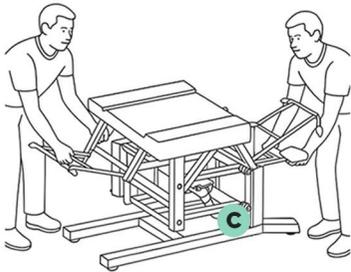

STEP 3


1. Line up the brackets (G) with the holes located in the head cushion (A).
2. Insert the hand lever (H) into the tracks located under the head cushion.
3. Carefully screw them in using the allen key provided.
4. Install leg cushion (B) by aligning brackets (G), inserting the hand lever into the tracks, and tightening four screws.



Warning: Take care when tightening screws to avoid cross-threading.



STEP 4

Insert the armrests (E) by gently bending them to align with the armrest holes in the sides of the bed top. Place the insert pillow (F) into the face hole.

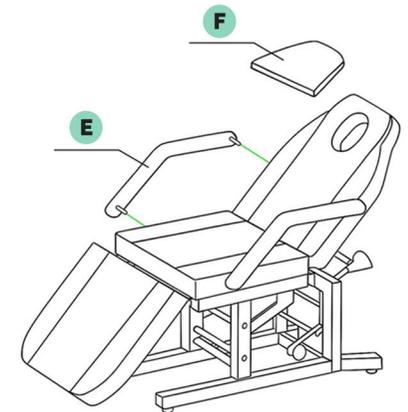

STEP 2

Locate the screws pre-fitted into the back of the head (A) and leg (B) cushions. Using the provided allen key (D), remove these screws.

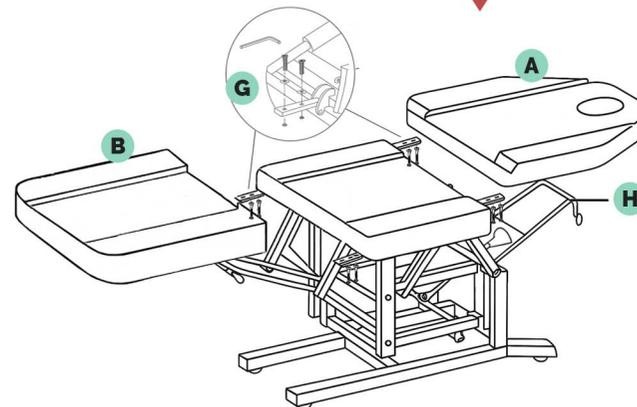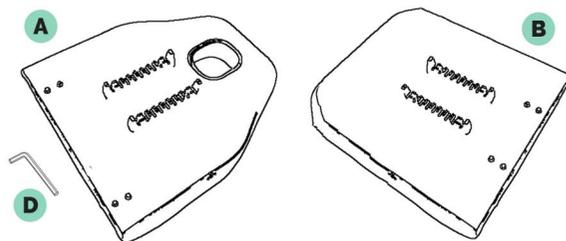

SAFETY WARNING: Do not allow children to operate this product. Always ensure that customers enter and exit the bed only from the middle section. Failure to follow these instructions may result in serious injury and damage to the bed.

Upholstery Care Guide

As a professional esthetician, investing in a high-quality facial bed can significantly enhance the comfort and effectiveness of your treatments. To maintain that level of performance and ensure long-term reliability, regular maintenance and proper care are essential. Like any professional equipment, your facial bed requires routine attention to stay in optimal working condition—ensuring safety, smooth functionality, and a consistently elevated experience for your clients.

General Care Tips

Maintain a stable temperature:

- Cold can lead to vinyl cracking
- Heat may cause permanent stretching

Keep out of direct sunlight for long periods to prevent fading and damage. Regular housekeeping helps preserve comfort and appearance.



Cleaning Instructions

Clean frequently to remove body oils that can harden vinyl

Use a colorfast cloth dampened with lukewarm water and mild, alkaline-free soap

Avoid soaking the material

Wipe off any soap with fresh water and a clean cloth

Dry thoroughly with a soft, dry cloth

For tougher grime, gently scrub with a soft brush



Avoid Using These Products

- Hot or boiling water
- Alcohol or hydrocarbon-based cleaners
- Acetone
- Bleach or harsh detergents
- Furniture polish
- Abrasive powders, pastes, or steel wool
- Silicone or petroleum-based products
- Solvent-based or abrasive cleaning agents

Routine Inspection

Perform periodic checks on:

- Hinges • Fasteners • Structural components

Ensure your chair remains safe, stable, and fully functional.

Do not dispose of old or defective appliances with household waste. Please use designated public collection points for proper disposal. This manual is for reference only. Specifications may change without prior notice.

WARRANTY PERIOD

STRUCTURE: **5 YEARS** | VINYL: **2 YEARS** | HYD. PUMP: **2 YEARS**

For more information about our warranty, please refer to our website.

DSSE

Australia:

www.dsse.com.au

United Kingdom:

www.dssebeauty.co.uk

Europe:

www.dsseworld.com